

**märklín**  
HO

---


**Innenbeleuchtung**  
**Lighting Kit**  
**Eclairage intérieur**  
**Interieurverlichting**  
**Alumbrado interior**  
**Illuminazione interna**  
**Vagnsbelysning**  
**Indvendig belysning**

---



**7316**






Gehäuse abnehmen  
Removing the body  
Enlever le boîtier  
Huis afnemen  
Retirar la carcasa  
Smontare il mantello  
Kåpan tas av  
Overdel tages af

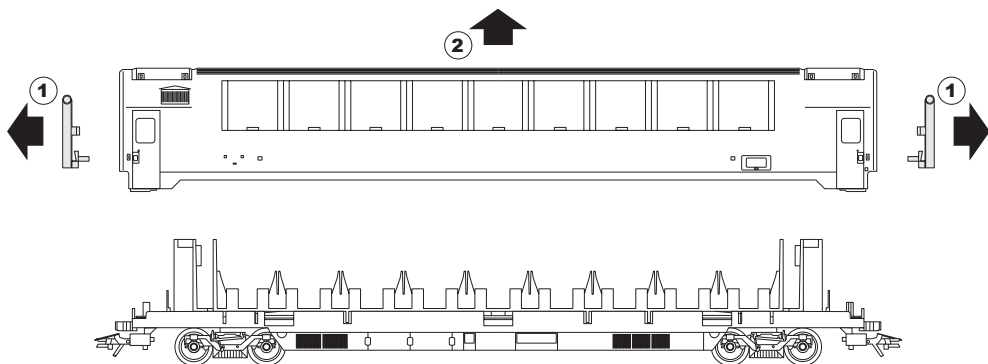


Massefeder einsetzen  
Install grounding spring  
Mise en place du ressort de masse  
Massaveer aanbrengen  
Introducir el muelle  
Inserire le molla di massa  
Montera jordledningsfjädern  
Stelfjederen sættes ind

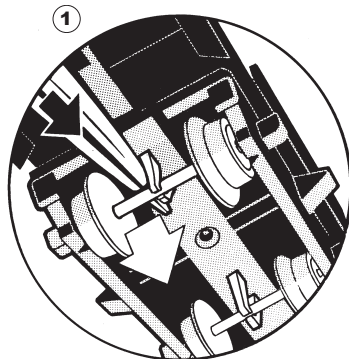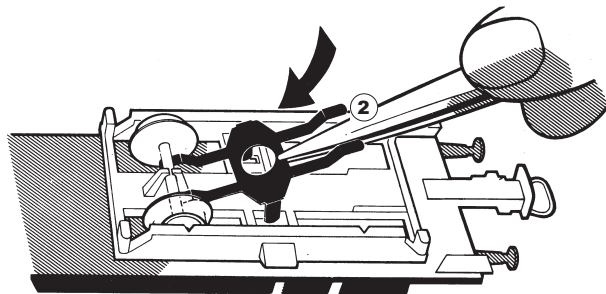


Schleifer einklipsen  
Clip on pickup shoe  
Encliqueter le frotteur  
Sleepcontact inhaken  
Encajar el patin  
Agganciare il pattino  
Tryck fast släpskon  
Slæbesko klipses ind

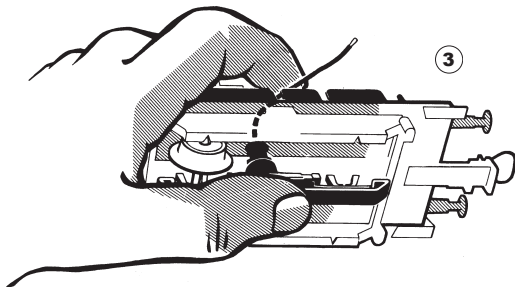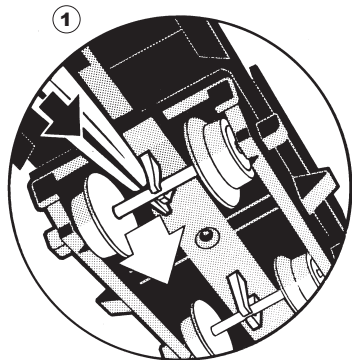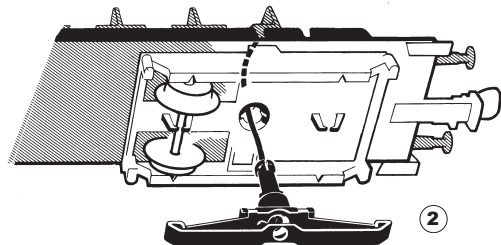


Kontakt-Streifen einsetzen  
Installing contact strips  
Insérer la bande de contact  
Contactstrip monteren  
Colocar el listón de contacto  
Installazione delle strisce di contatto  
Montera kontaktremsan  
Kontaktstykker indsættes

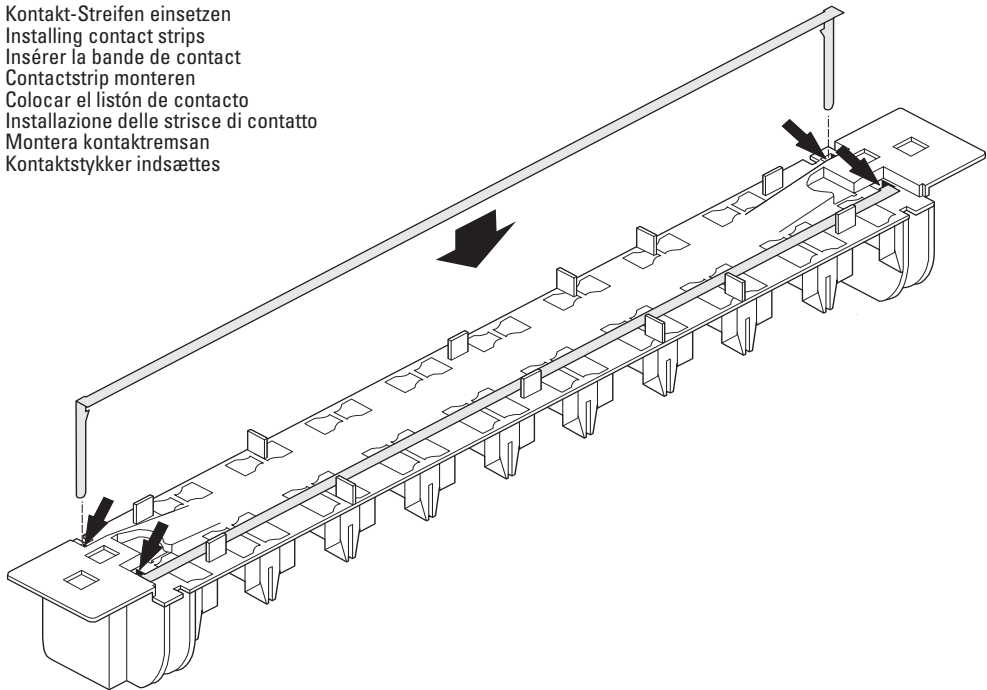

Inneneinrichtung einsetzen  
Install interior details  
Insérer l'équipement intérieur  
Interieur plaatsen  
Colocar el equipo interior  
Installazione dell'arredamento interno  
Sätt in inredningen  
Indvendig indretning indsættes

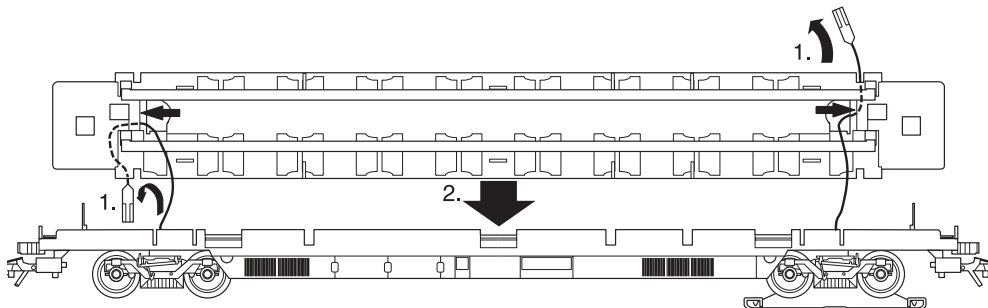


Leitungen mit Flachstecker anschließen  
Connect wires with flat plugs  
Connecter les lignes avec les fiches plates  
Leidingen met kabelschoen aansluiten  
Conectar los cablecillos con clavijas planas  
Collegamento dei cavi conduttori con spine piatte  
Anslut ledningarna med flatkontakter  
Ledninger tilsluttes med fladstik

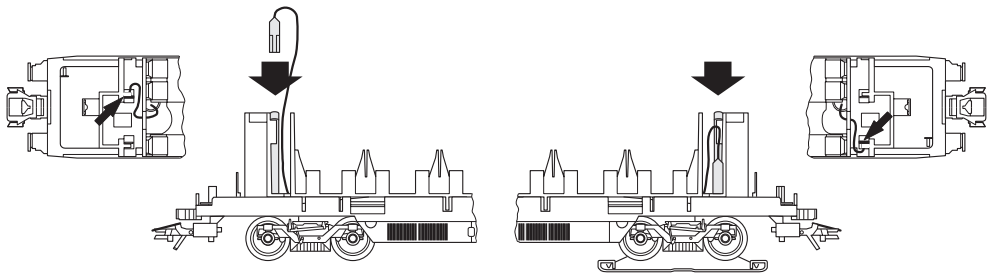





Leuchtstab mit Glühlampen einsetzen  
Install the light diffuser bar with light bulbs  
Insérer la torche lumineuse avec ampoule  
Lichtgeleider met gloeilampen plaatsen  
Colocar la varilla luminosa  
Installazione della barra luminosa con lampadine  
Sätt in lysstav med glödlampor  
Lysstav med elpærer indsættes

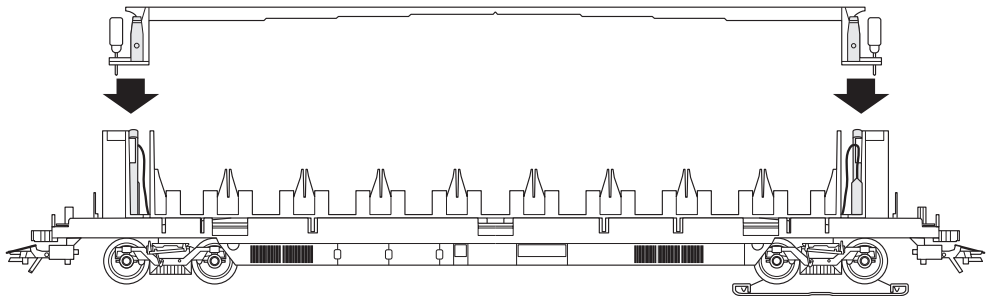

Gehäuse aufsetzen  
Put the body back on  
Mettre le boîtier en place  
Huis plaatsen  
Colocar la carcasa  
Applicazione della sovrastruttura  
Montera kåpan  
Overdel sættes på

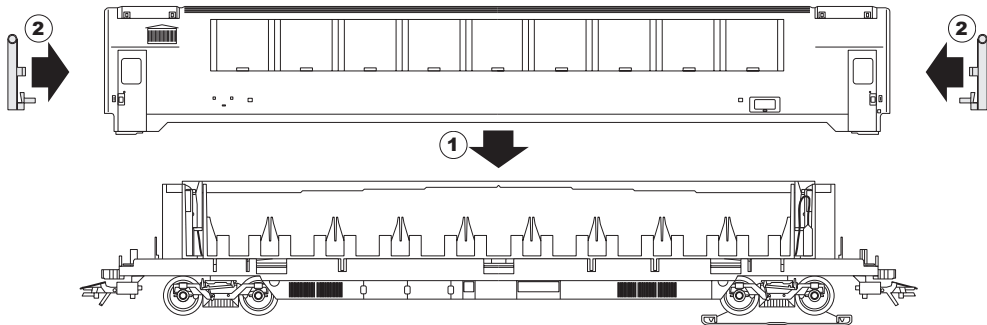



E600 080



E418 100



E210 240



PAP



Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)

Gebr. Märklin & Cie. GmbH  
Stuttgarter Straße 55 - 57  
73033 Göppingen  
Germany  
[www.maerklin.com](http://www.maerklin.com)

[www.maerklin.com/en/imprint.html](http://www.maerklin.com/en/imprint.html)

674930/0822/Sc7Ef  
Änderungen vorbehalten  
© Gebr. Märklin & Cie. GmbH